

INSTRUCTIONS FOR RETURNING DRAWER SLIDES AND DISABLING MID-CENTURY 3-DRAWER CHEST

Step 1: Locate the first drawer to be removed. These steps will be followed for each of the three drawers.



Step 2: Pull the drawer out until it naturally stops. Then, applying some force, continue to pull the drawer away from the chest until it is removed from the chest.





Step 3: Turn the drawer over and locate one of the two plastic pieces. Each has two screws and holds the metal runner in place. Remove both screws with a #2 Phillips screwdriver.



Step 4: Locate and remove the screw holding the metal runner in place just behind the drawer face – towards the front of the drawer.



Step 5: Pull the metal runner off the drawer.



Step 6: Using a #2 Phillips screwdriver, remove the screw from the front of the drawer slide.



Step 7: Locate the screw at the back of the drawer slide and remove it with a #2 Phillips screwdriver.



Step 8: Remove the slide from the case.



Step 9: Repeat steps 1 through 8 for each drawer. One set of drawer slides should be removed for each drawer – three total.

Step 10: Contact HMI to receive a pre-paid shipping label to return the drawer slides to HMI and to receive a refund of \$250.

Step 11: Ship the drawer slides to HMI.

Step 12: Once you receive your refund dispose of the chest in a manner that complies with all federal, state, and local regulations.

For any questions regarding these instructions contact HMI at 800-819-4796 from 8 a.m. to 5 p.m. ET Monday through Friday.