

INSTRUCTIONS FOR ANCHORING MID-CENTURY 3-DRAWER CHEST

Step 1: Find and remove the tip restraint package attached to the back side of the chest, or use the kit HMI mailed to you.



Step 2: Open the package and the remove contents, which are as follows:

2 Screws (1 long, 1 short)

2 Brackets

1 restraint cord



Step 3: Use the shorter screw to attach one of the brackets to the top edge of the back of the chest, with the angled portion of the bracket pointing down.



Step 4: Determine the location where the chest is to be placed. Find a stud to secure the screw for the second bracket. This should be two inches below the bracket on the back of the chest.



Step 5: Drill a 3/16" hole into the wall where marked (this should be two inches below the bracket on the back of the chest).




Step 7: Using the longer screw, attach the second bracket to the wall, with the angled portion of the bracket pointing down.



Step 8: Place the chest in line with the bracket mounted on the wall. Lace the end of the cord through the hole of the bracket attached to the chest, and then up through the bracket attached to the wall.



Step 9: Secure the cord by placing the end of the cord in the slot on the opposite end and pull, creating a secure loop. Pull the cord through until the chest is the desired distance from the wall.

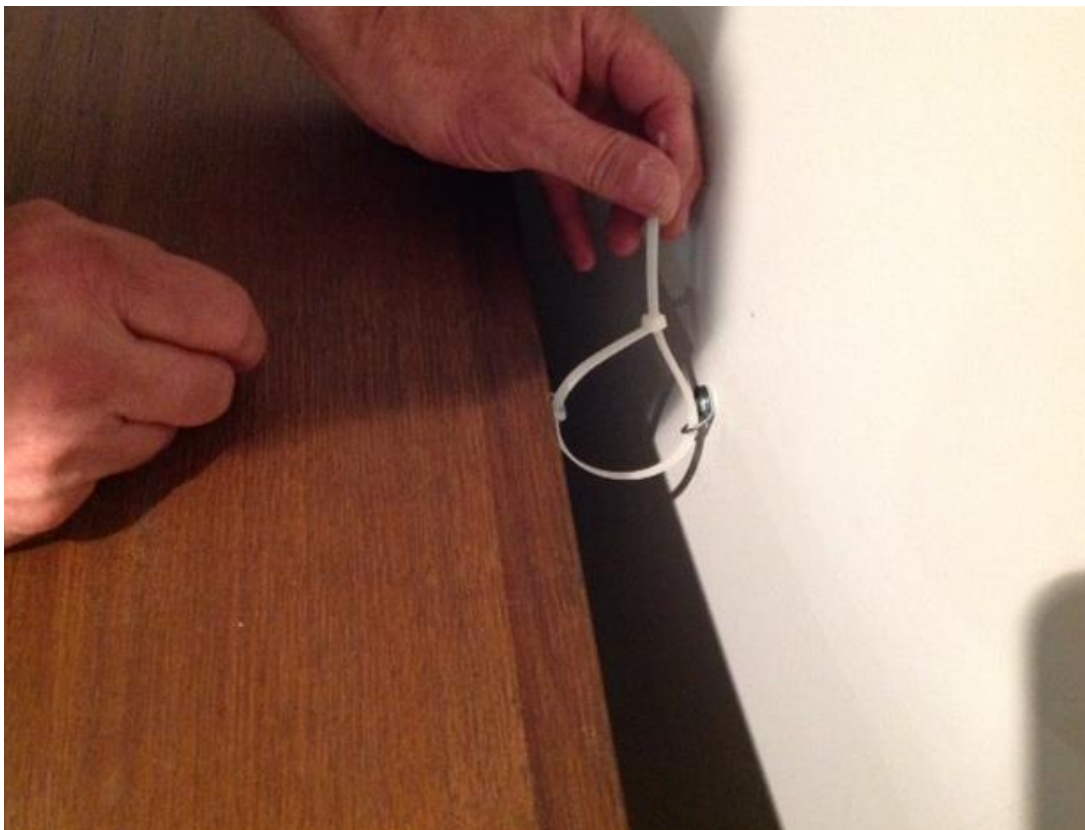

Step 10: Check to make sure the cord is threaded through both brackets, is locked in place, and the chest is secured to the wall.



For any questions regarding these instructions contact HMI at 800-819-4796 from 8 a.m. to 5 p.m. ET Monday through Friday.